



Revision: 1.0 - 02/16/2011

Install Time: 20 Minutes

LA-7500-30 & LA-7500-30B

Victory Lowering Kit


For Victory Vegas, Hammer, & Kingpin

Page: 1

If you question your abilities it may be best for an experienced service technician to perform this installation. A Yamaha Service Manual would be helpful to have on hand for reference.

## INSTRUCTIONS:

1. Place the motorcycle on a suitable stand so that the rear wheel is barely touching the ground.
2. Remove the (2) bolts from the stock lowering links using 11/16 open end wrenches.

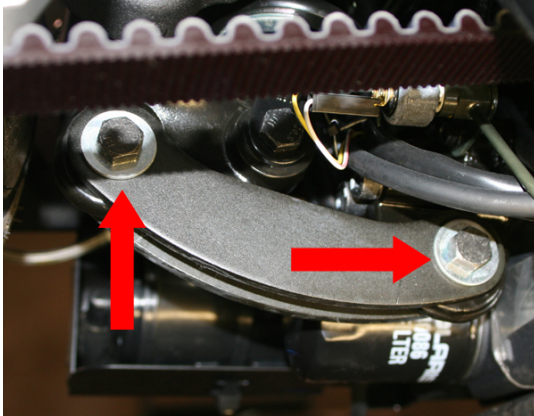

3. Carefully pry the stock links away from the motorcycle.
4. Install one of the new links by lowering the motorcycle until the link snaps in place, then install the other.
5. Re-install the stock hardware using red threadlocker and torque to the stock specs.

Before



After



**WARNING!** The installation of these products will lower your motorcycle approximately 1.5 inches. This places the motorcycles chassis, floorboards, exhaust and other equipment approximately 1.5 inches closer to the ground. It is crucial to understand that these items as well as similar equipment will more readily contact the surface of the road when cornering **AT ANY SPEED**. Should this contact occur, the result could be loss of vehicle control or damage to equipment. We do not recommend a lowered motorcycle be ridden with a passenger! It is critical that the rider of a motorcycle equipped with lowering products be aware of the reduction in maneuverability caused by the installation of such products. LA Choppers accepts no liability whatsoever for injury or damage resulting from the installation of these products.

Our install guides provide a basic outline on the proper installation of our products. Further tuning and/or fitment may be required. LA Choppers bears no responsibility on installation costs associated with this product.

© 2013 LA Choppers